


## How to Measure for a Door

### ROUGH OPENING MEASUREMENT

To ensure accurate measurements, first remove the interior casing on the sides and top of your single or double door to reveal rough opening frame.

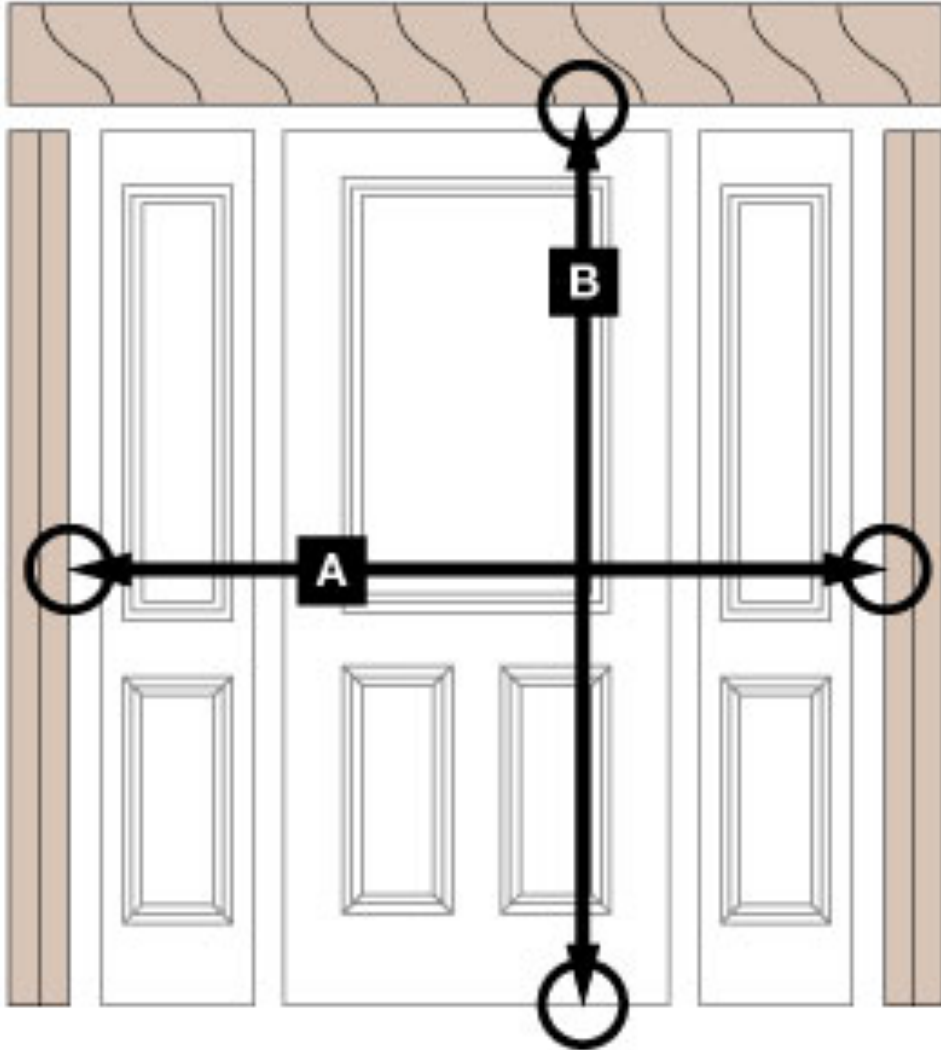

**Measurement A:** Measure from inside the face of one stud to the inside of the face of the other stud.

**Measurement B:** Measure from the subfloor to the bottom of the header above the door.

## DOOR HANDING AND SWING

Doors can be installed for right or left swing. Image below illustrates door units viewed from outside the home.

